

# Installing and Maintaining the Optional Front Air Filter

Follow these instructions to install and maintain the optional front air filter for your Epson® LivingStation® television. This filter is intended for customers who live in dry, dusty areas to reduce the amount of dust that enters the TV.

## Caution

Once the new air filter has been installed, you need to clean it periodically as described on the next page. Failure to clean the filter may cause the TV to overheat. If the TV gets too hot, it may turn itself off for protection.

## Installing the Filter

Follow these steps to install the new filter:


- 1 Remove the right speaker cover. Grasp the cover and pull it straight off.



- 2 Remove the adhesive backing from the filter.




- 3 Align the slot in the filter with the tab on the TV. Press the filter in place over the air intake vent.

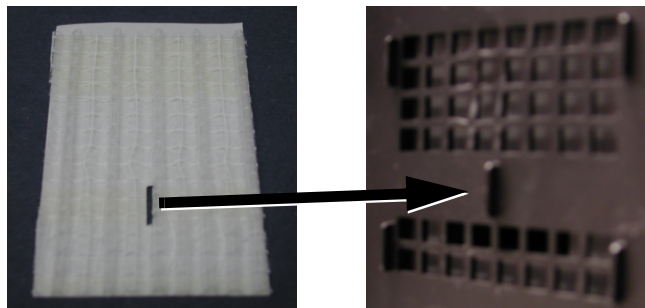

Align slot with tab on  
air intake vent

- 4 Press down on the filter to make sure the adhesive is secure.

Make sure adhesive  
is secure

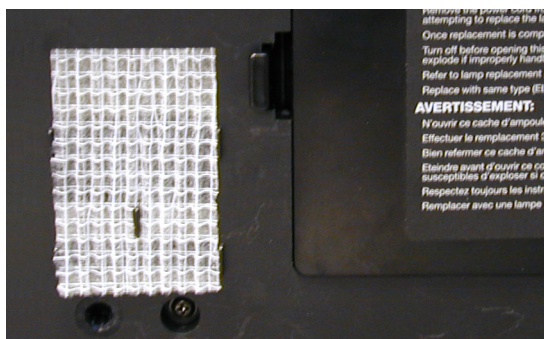

- 5 Replace the speaker cover.

## Cleaning the Air Filter

Once the air filter is installed, you need to inspect it regularly. If the filter appears to be dirty, clean it as described below.

### Note

Whenever you inspect the front air filter, you should also check the air filter on the left side of the TV and clean it if necessary. The location of this filter is shown in your *User's Guide*. You can clean the side filter using the same method that you use to clean the front filter.

- 1 Remove the right speaker cover.
- 2 If the filter looks dirty, clean it using one of these methods:
  - Use a computer vacuum cleaner or the upholstery brush attachment for your home vacuum cleaner to lightly vacuum the filter and remove the dust. If your home vacuum cleaner has an air bleed valve (located near the end of the hose where you attach the cleaning tools), you should open the valve to decrease the amount of suction.
  - Use a clean paintbrush with very soft bristles to lightly brush off any dust from the crevices.
- 3 Replace the speaker cover.